

## INSTALLATION GUIDE CONVEX

### Follow these steps:

#### **Wall Installation**

- Each Convex panel comes with a keyhole hanger placed in the top center of the back panel. The hanger is embedded into the wood for a seamless wall mounting.
- **2.** The provided screws and wall plugs can be used with most walls and do not require any special preparation.
- **3.** T-Nut + Eyebolt included for ceiling mount, pre-installed.

#### Not included:

Suspension kit / wire for hanging from the ceiling.
\*We do not add any suspension kit or wire, as the needed system is dependent on the ceiling type and project.

#### Included:

 $4 \times T$ -Nuts pre-drilled & installed in the back of the panel,  $1 \times T$  in each corner.  $4 \times T$ -Nuts (Size M6 /6mm diameter bolt) to screw into the T-nuts. \*The height of the eyebolt can be adjusted ca. 1 inch by screwing the bolt more in or out.


For the wire, Nordgrona recommend a gauge that is sufficient to hold the weight of the heaviest panel. A 60cm Convex Square can weigh 10-13kg. Although the panel will be held by 4 bolts, Nordgrona recommend that 1 wire should be able to hold the entire weight.

The eye bolts create a hook system, which allows for multiple hanging options.

**4.** The panels can be mounted to metal grids, or suspended from the ceiling with wires / hooks. Other options include using clutches for height adjustment, or carribenas for easy connection.

For more information on Convex, visit scandinavianspaces.com/products/convex














### **INSTALLATION GUIDE** CONVEX

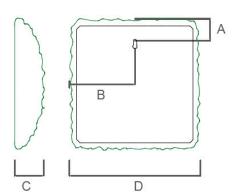

**SQUARE** 

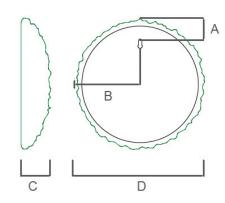

**CIRCLE** 

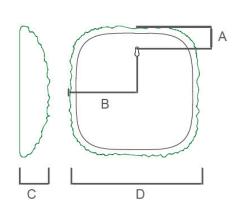

**SQUIRCLE** 

	Small (C-XX-30)	Medium (C-XX-45)	Large (C-XX-60)
Α	3"	3"	3"
В	5.9"	8.9"	11.8"
C	3.5"	3.9"	4.3"
D	11.8"	17.7"	23.6"



# INSTALLATION GUIDE CONVEX

